


## Seats

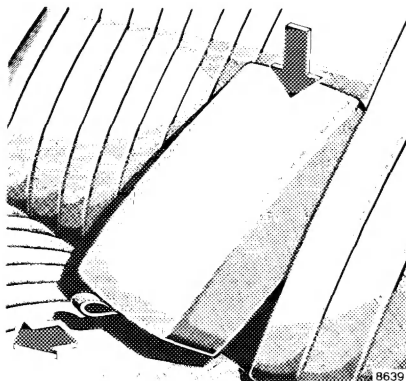


### Arm Rest (Rear Seat)

A center arm rest is provided in the rear seat which can be pulled out with a loop.

When replacing, lift at the rear.

For the removal of the rear seat cushion see "Practical Hints".

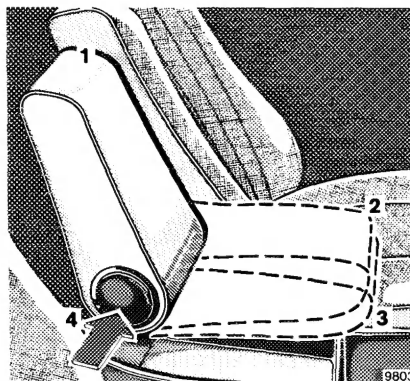

### Arm Rest (Front Seats)

The arm rest engages in 3 positions.

Position 1 = arm rest folded up.

Position 2 = for normally inclined seat back.

Position 3 = for extremely inclined seat back.

For downward adjustment of the arm rest, depress release button 4.

### Warning!

The arm rest does not suffice as a child restraint system. In case of a frontal collision a child can be catapulted forward over the locked arm rest.